


JANOME

Janome Embroidery Placemats

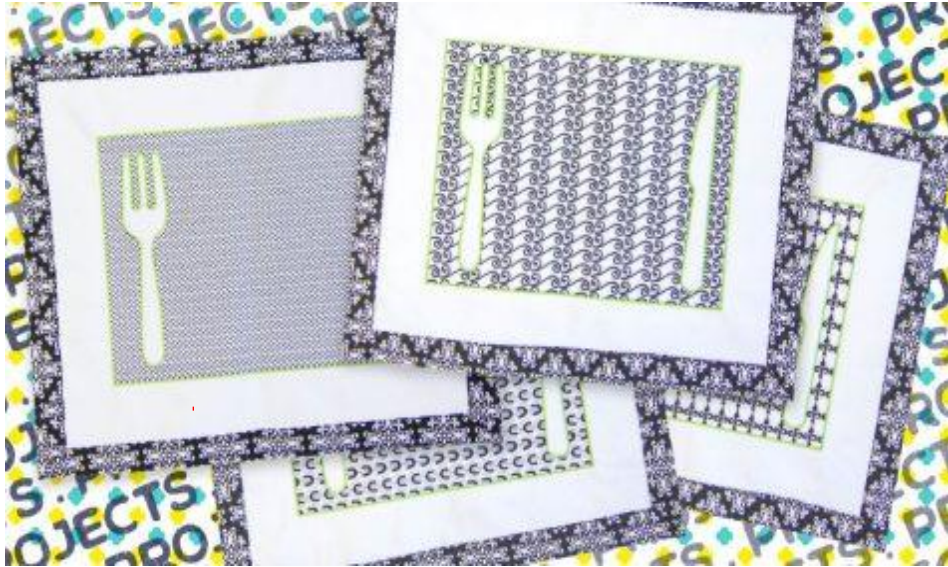

[Click here to download designs](#)

Requirements:

- Felt
- Backing fabric
- Stabilizer
- 2 Embroidery threads
- Janome Bobbin fill
- Sewing thread
- Pins
- Rotary Cutter, Ruler, Mat
- Scissors
- Sewing Machine
- Walking foot
- Embroidery Machine
- USB to transfer designs to machine
- Designs – Available in 2 sizes – Press link above to download.

Cutting instructions:

Select a size embroidery to suit your machine and then cut the matching felt rectangle.

- Large Embroidery - 18" x 15" - 1 for each placemat
- Small Embroidery - 15" x 12.5" - 1 for each placemat


For the backing piece cut the size to match the embroidery.

- Large Embroidery - 23" x 20" - 1 for each placemat
- Small Embroidery - 20" x 17.5" - 1 for each placemat


JANOME

Instructions:

1. Transfer the designs to your USB device from the computer download.
2. Open the design on your embroidery machine.
3. Take the nominated hoop for your machine and hoop with stabilizer and felt.
4. Thread the machine with the background colour.
5. Stitch the main background. (For the sample we used Black)

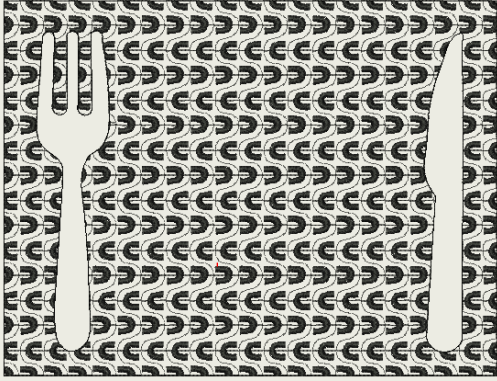

6. Change the thread to another colour for the outline of the utensils and background. (For the sample we used Green)

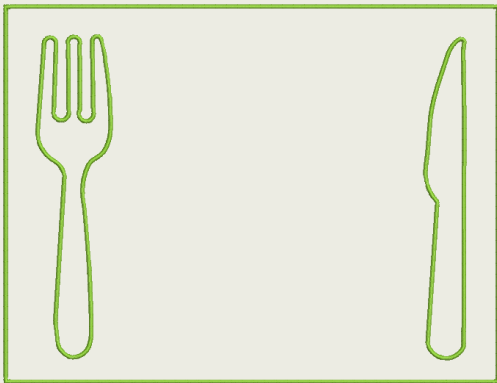

7. Remove felt stitch out from the hoop.
8. Trim the felt 3" from the edge of the embroidery border outline. This will allow for white felt between the embroidery and your border / backing fabric.
9. Lay the completed front piece into the centre of the backing with wrong sides matching.




10. Start with one side and fold the raw edge into the edge of the felt.



JANOME

11. Then take the folded edge onto the front of the felt placemat.

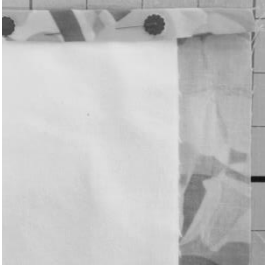

12. At the corner fold the corner down the edge of the next side in line with the edge of the felt.



13. Then fold the raw edge of this side in to the edge of the felt.



14. Then fold this edge over onto the front of the completed placemat.



15. Continue this process around all the edges of the placemat pinning as you go.
16. Line the edge of the walking foot up with the external edge of the binding so that the stitch is sewing on the edge of the binding. Sew with a straight stitch or forward moving decorative stitch around locking off at the end.
17. Your placemat is now complete and ready for use.